




How to activate / de-activate PUSH notifications on Kestrel Viewer... ..

NOTE: you MUST have an account registered for this function to work

From the 'Live View' window, click the Hamburger icon top left




A side menu will slide out, click on the 'Alarm' section

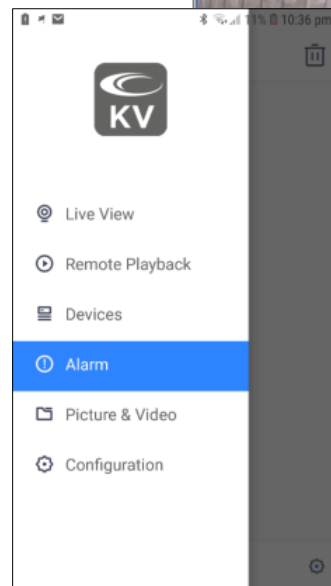


Kestrel 'Activate / de-activate PUSH notifications'


In the 'Alarm' screen click on the cog icon, (bottom right) to open alarm Settings page.

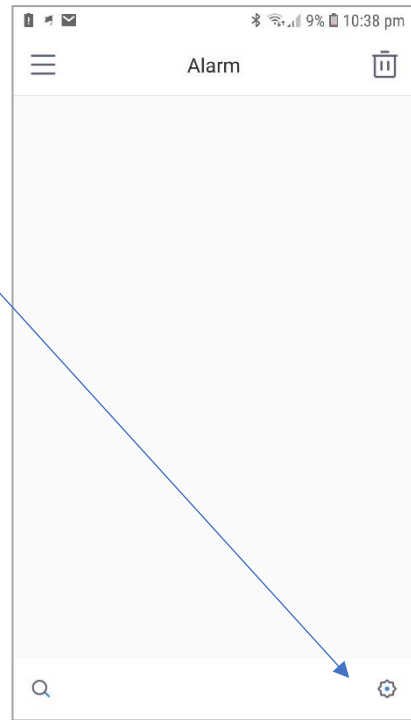

Click on your device/recorder, (in this instance called 'Test')

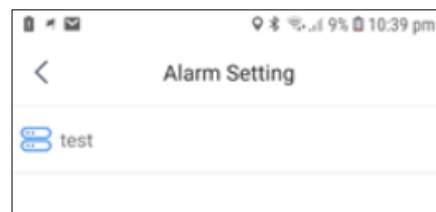

Select the channel/camera you want to amend, (test 1)

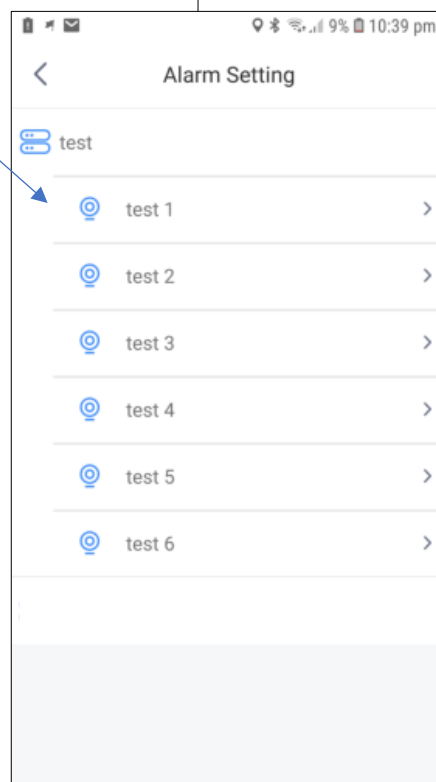

Kestrel 'Activate / de-activate PUSH notifications'

Turn PUSH on or off


Select the type of alert you want notifications

- All
- Motion Detection
- Video Blind, (no video signal)
- Video lost

In this example Push has been turned on, and all types have been selected.

Click the disk icon, (top right) to save your settings


Click the back icon, (top left) to go back to previous page

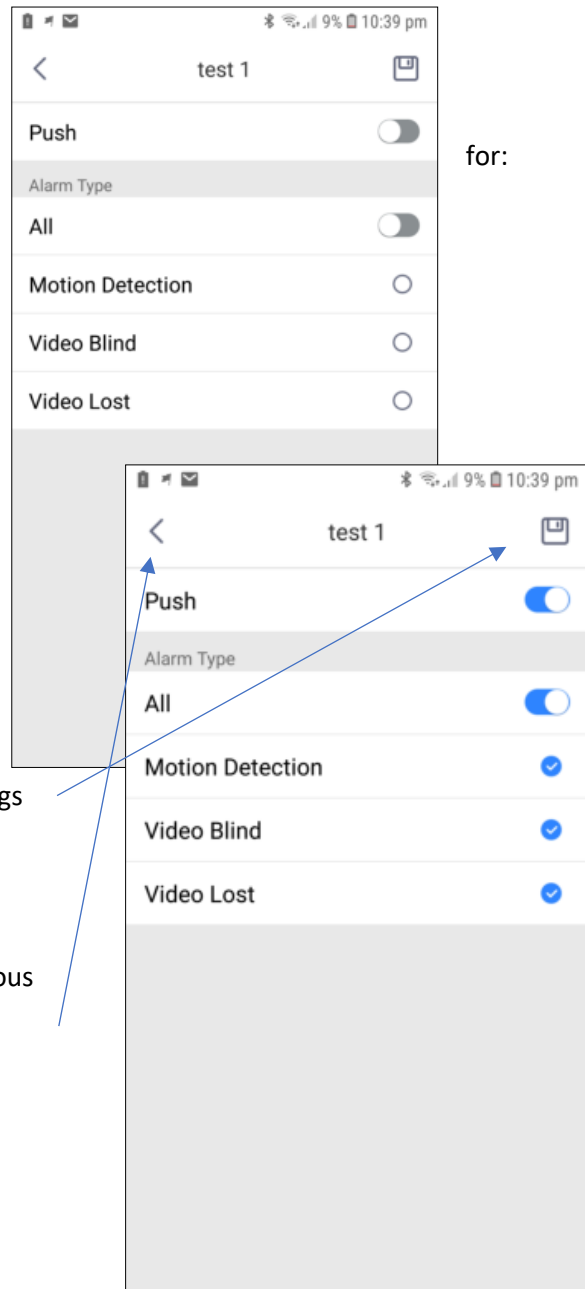


Kestrel 'Activate / de-activate PUSH notifications'

Now you will need to turn the PUSH notification on/off

Go back to the side menu, and select the 'Configuration' tab

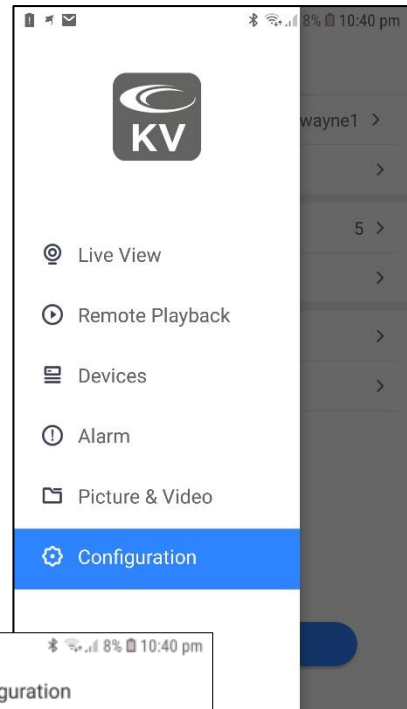

Click on the 'Alarm Notification' section

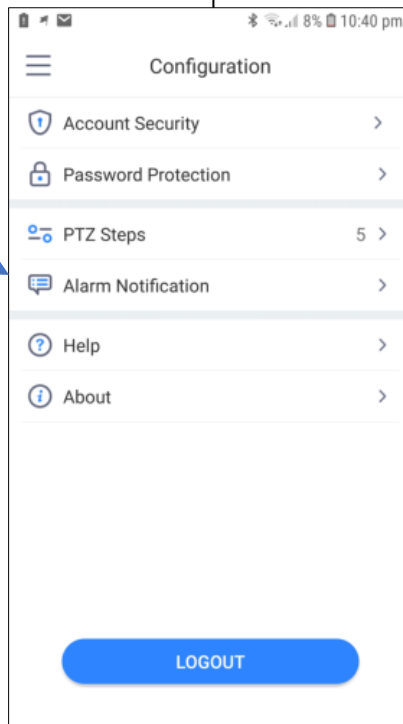

Kestrel 'Activate / de-activate PUSH notifications'

Select or de-select

- Do not disturb
- Alarm Vibration
- Alarm Sound

Click the back icon, (top left) when done

😊 That's it ready to go

