

Wi-Fi Video Doorbell *Battery Management*

From the main screen, click the 'Cog' icon to enable "Basic Config" & "Function Settings" screen

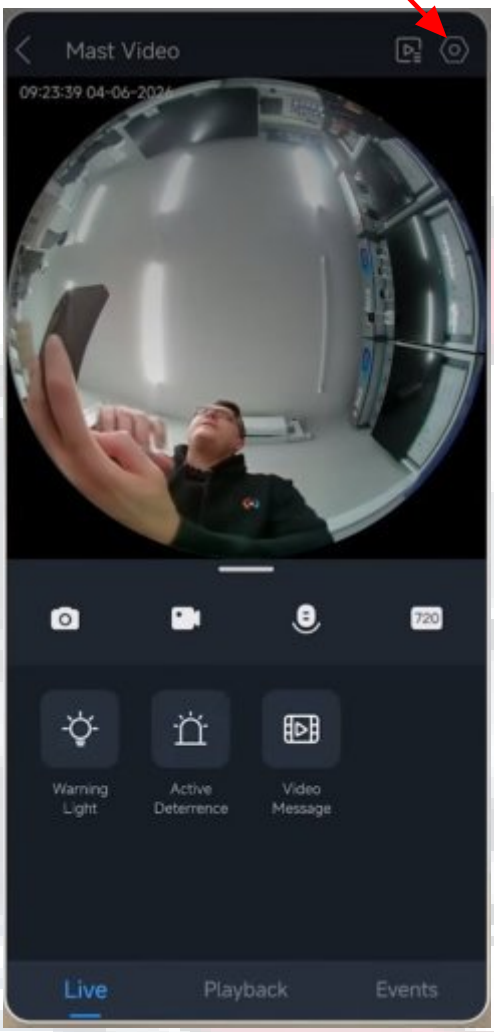


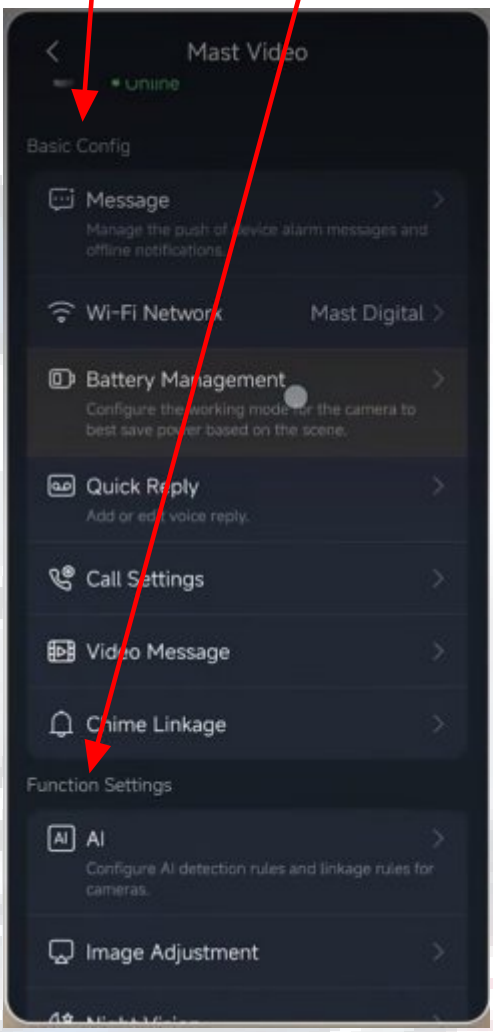

Battery Management Includes


- *Battery Status, (% icon & Remaining time)*
- *Work Mode, (Power Saving Mode)*
- *Work Period, (Stay awake)*
- *Low Battery Limit*
- *Show Battery Infomation*
- *Power Statistics, (inc Time awake)*


Select the 'Battery managerment' arrow >

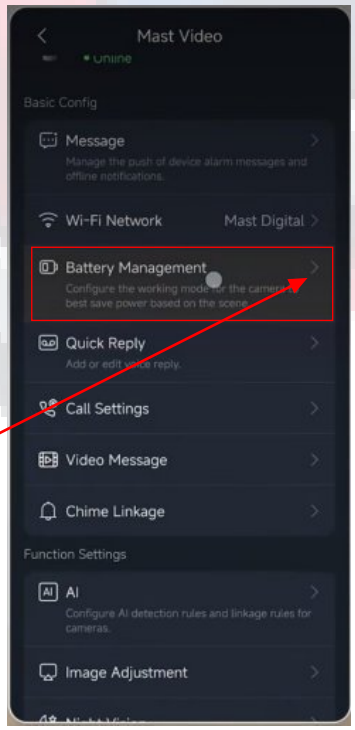

An icon will display the device's current battery level, together with the remaining battery percentage.

The display will also show the estimated remaining operating period, provided in days and hours, allowing the user to quickly understand how long the device can continue operating before the battery requires recharging.

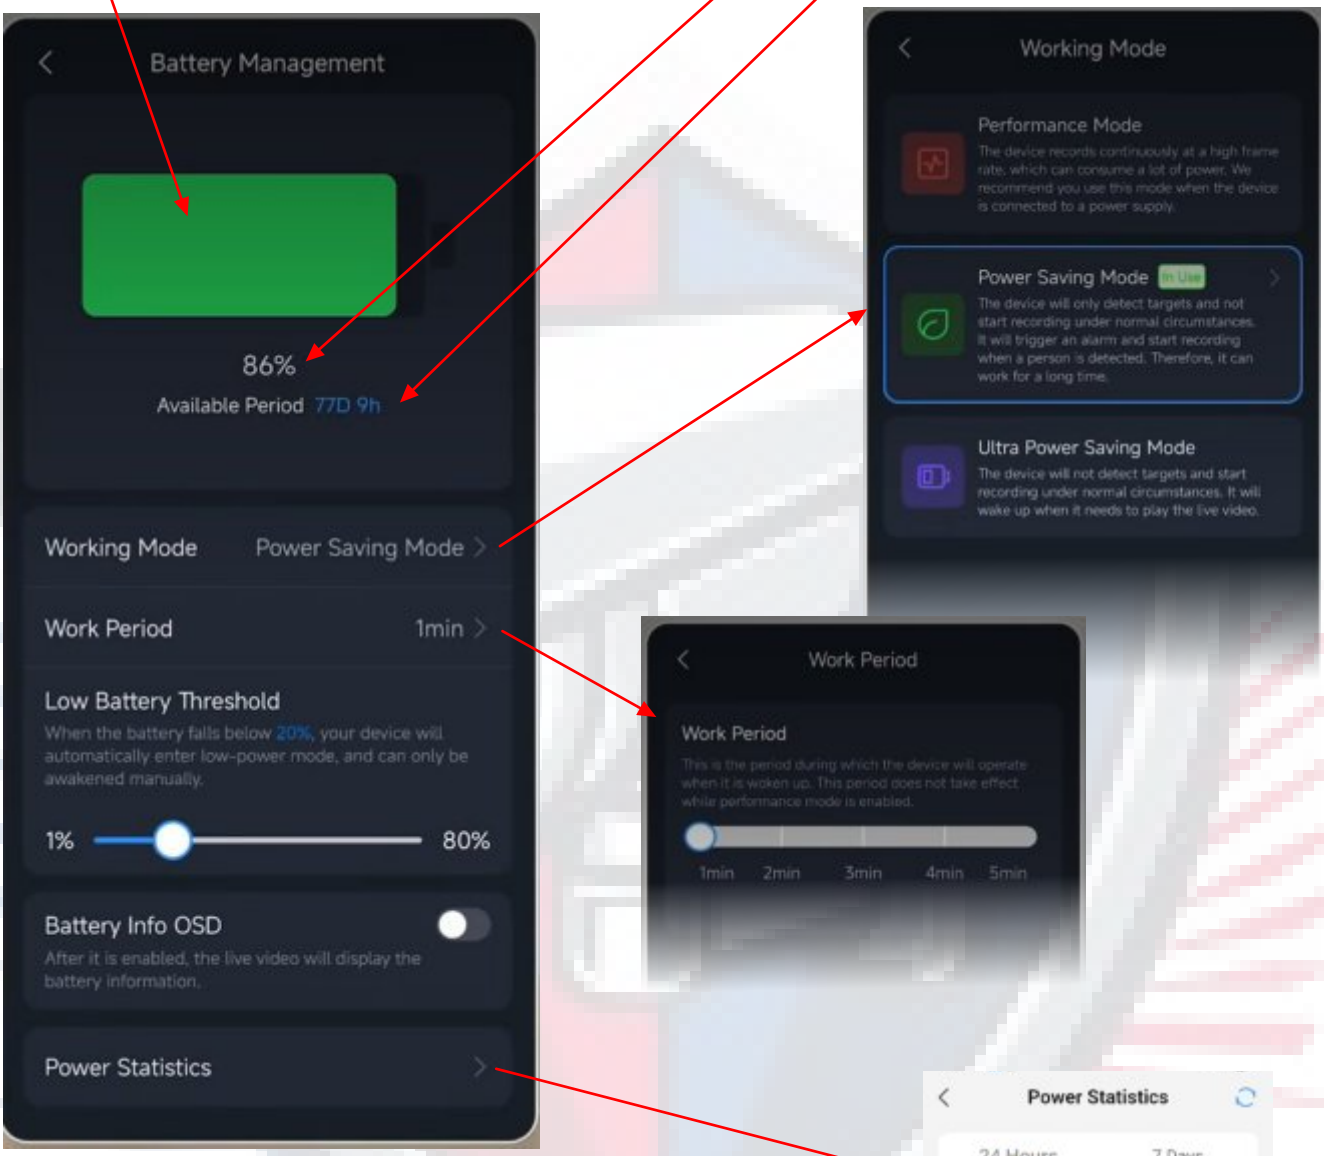

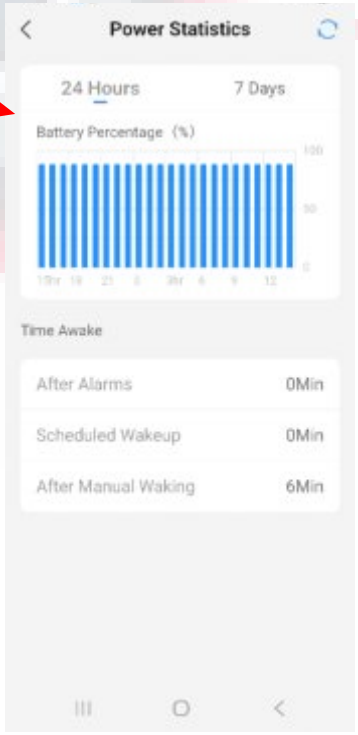

Work Period:

When the device is woken from Power Saving Mode, it will remain active for the selected period of time, which can be set between 1 and 5 minutes.



As the selected time approaches expiry, a 10-second warning screen will appear. The user will then have the option to either:

Cancel or Continue