

Wi-Fi Video Doorbell *Quick Reply*

From the main screen, click the 'Cog' icon to enable "Basic Config" & "Function Settings" screen

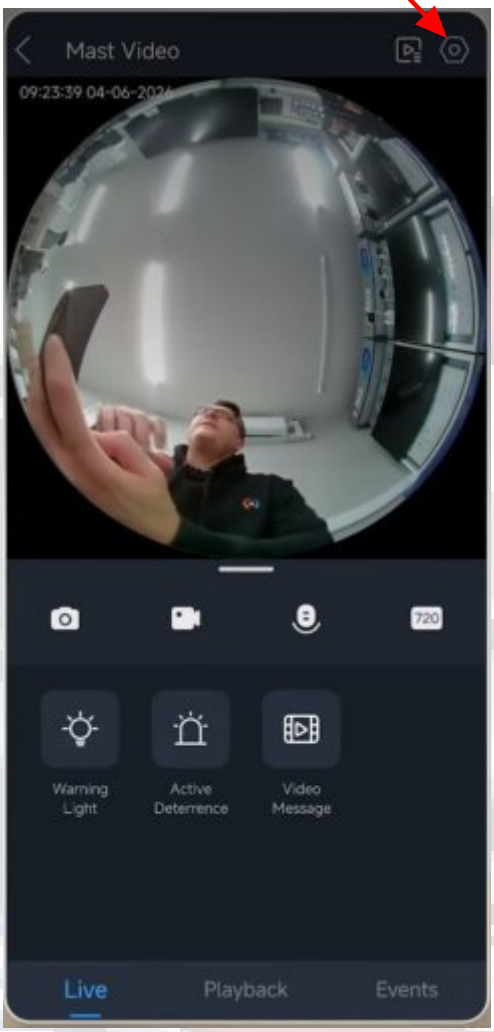


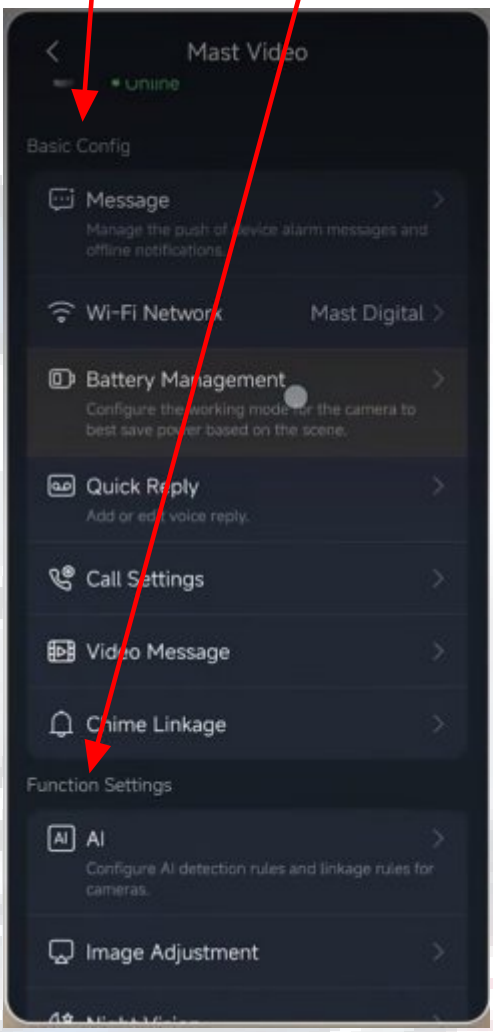

Quick Reply


- *Set Language*
- *Set Default Responses*
- *Custom Responce*


Select the 'Quick Reply' arrow >

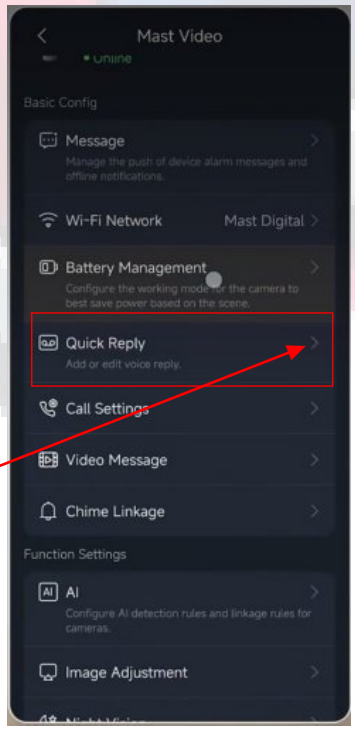

There are a few options available here:

Select the language you require for your announcement. This can be selected using the World icon with the letter A in the top-right corner of the screen.

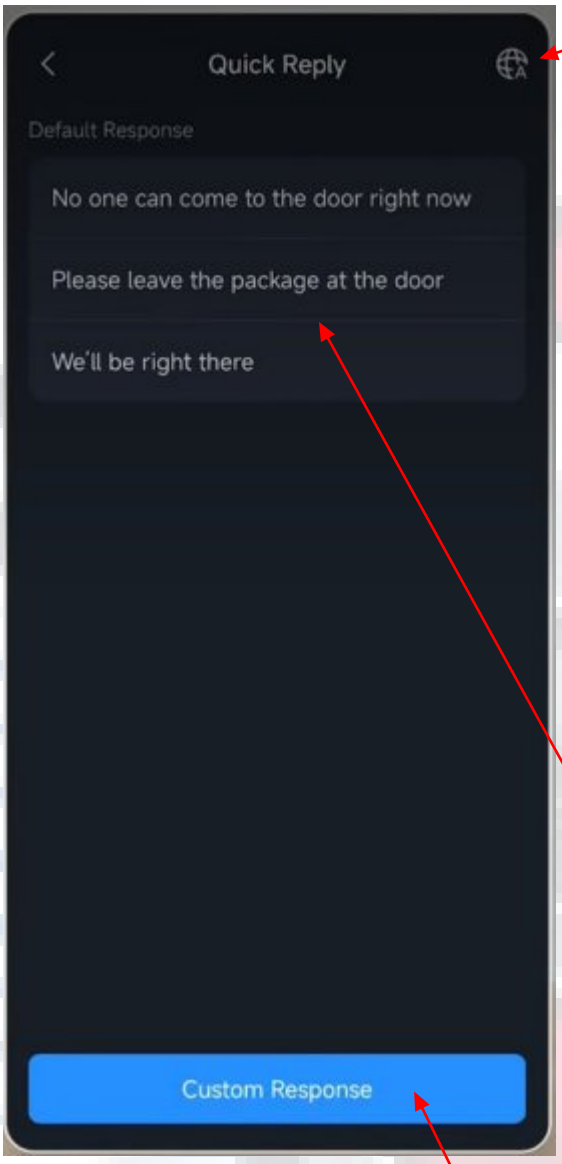

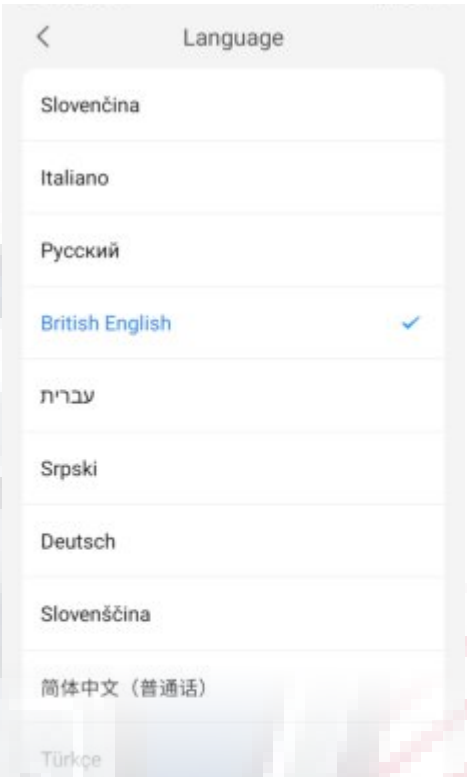

Select a Default Response from the pre-programmed options available.

Or Record your own custom response.

You can record a message of up to 10 seconds.

