



Getting to know your app

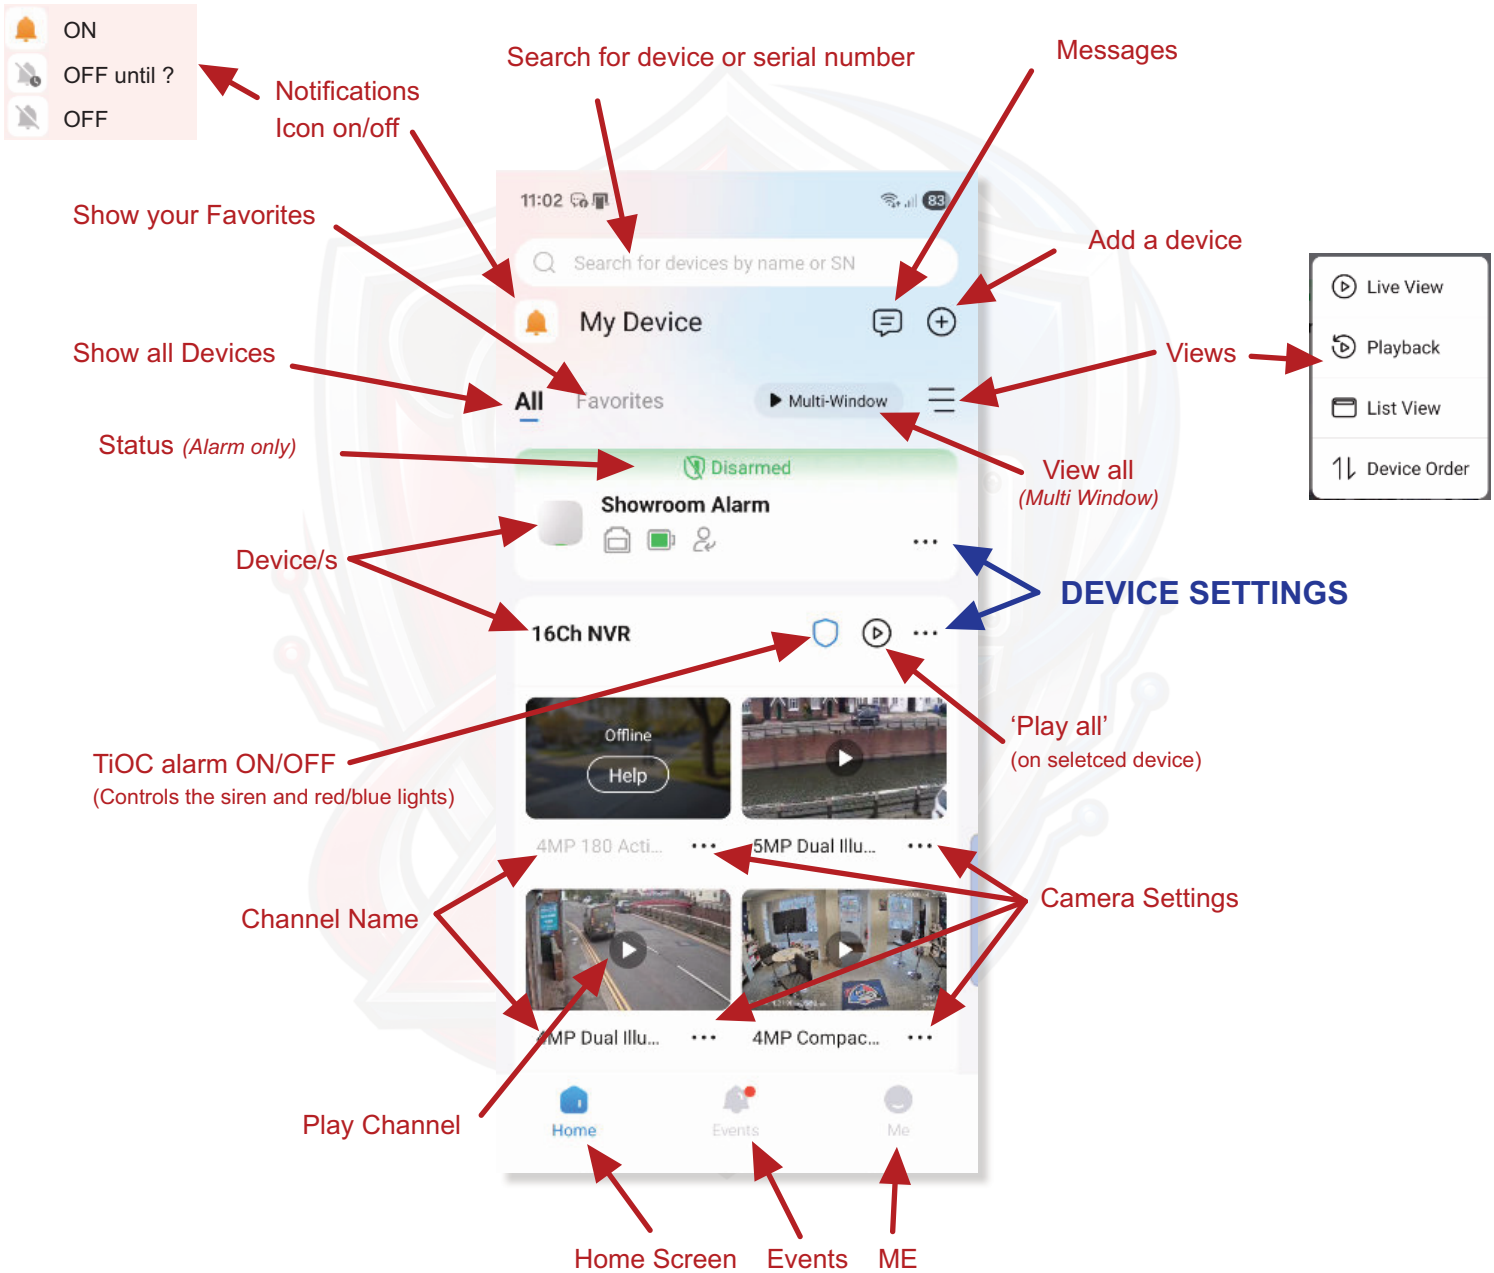


Toggle between ‘List’ & ‘Gallery’ views


Devices in ‘List View’

Devices in ‘Gallery View’

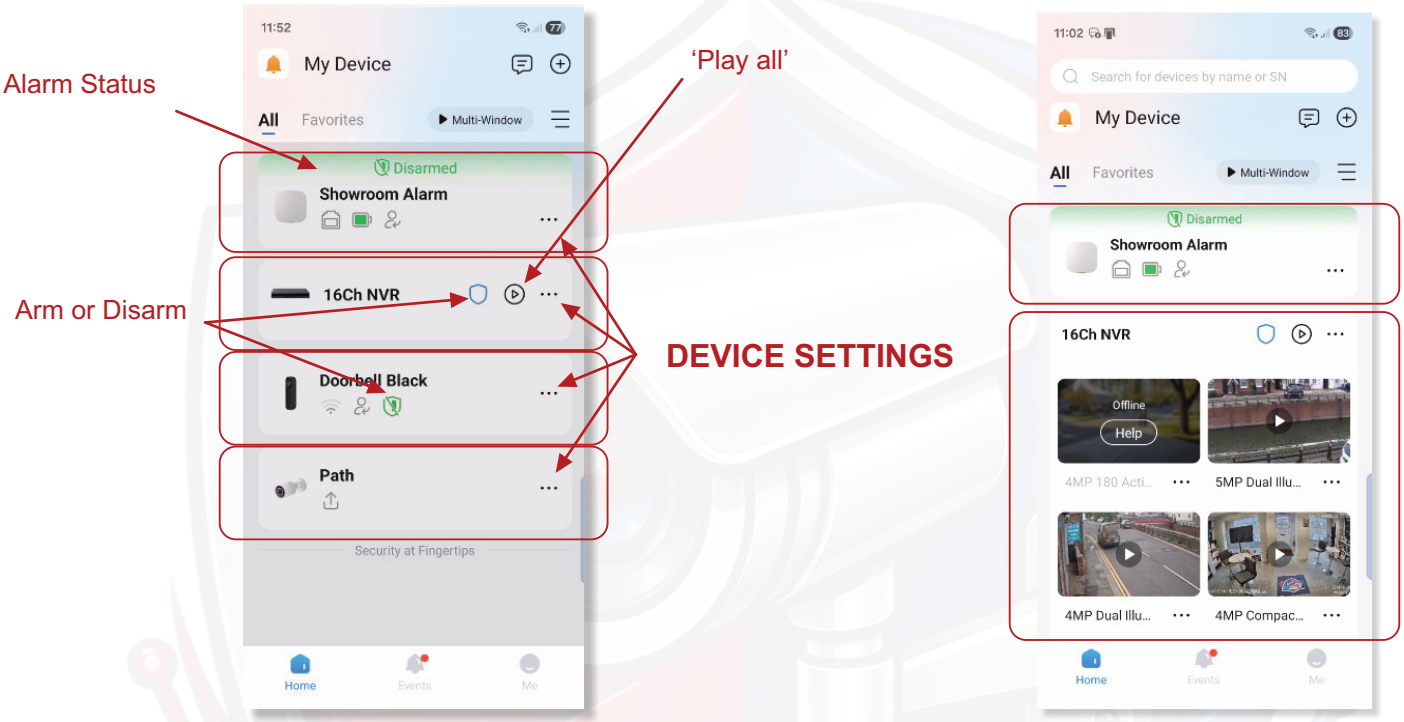

To swith from ‘List View’ to ‘Gallery View’ or visa versa, tap on the 3 lines (☰) icon.

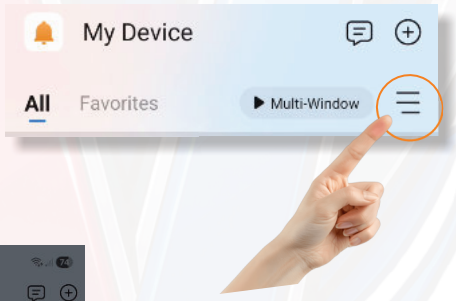


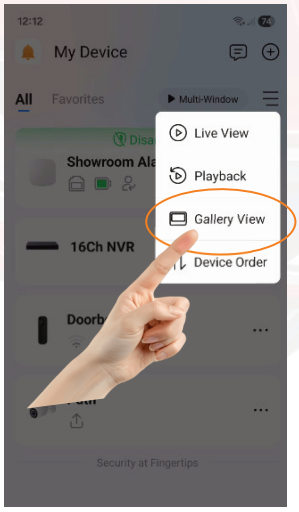


Select ‘Gallery View’


Rearranging the Order of Your Devices

To change the order in which your devices are displayed in the DMSS app, press tap on the 3 lines (☰) icon.

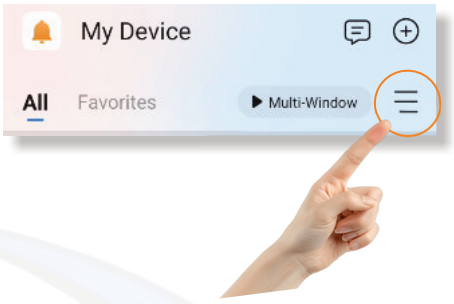

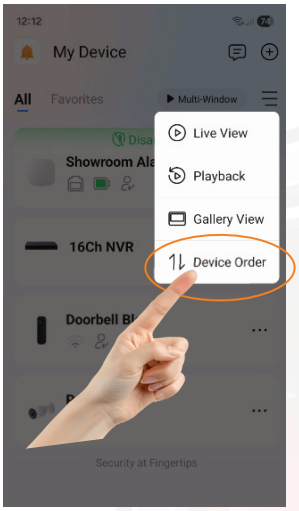

Select the 'Device Order' option

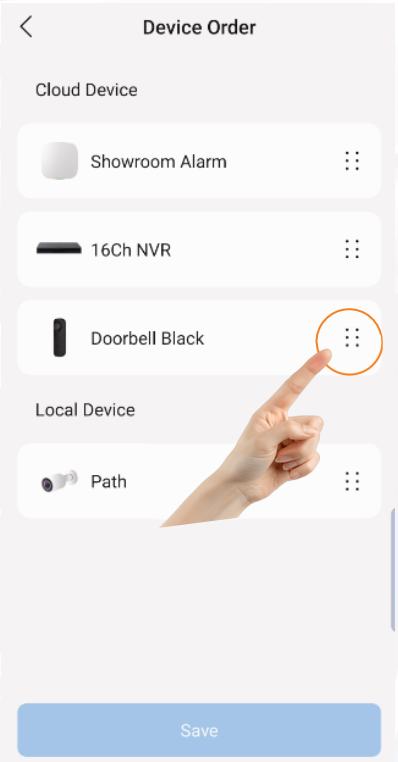


In this example, we will move the 'Doorbell Black' device above the '16Ch NVR'.

1. Locate the device you wish to move.
2. Using your finger, press and hold the six small dots next to the device.
3. While keeping your finger on the screen, drag the device to your preferred position.

Once the device is in the correct position, lift your finger to release it.

The device will now appear in its new position in the list.

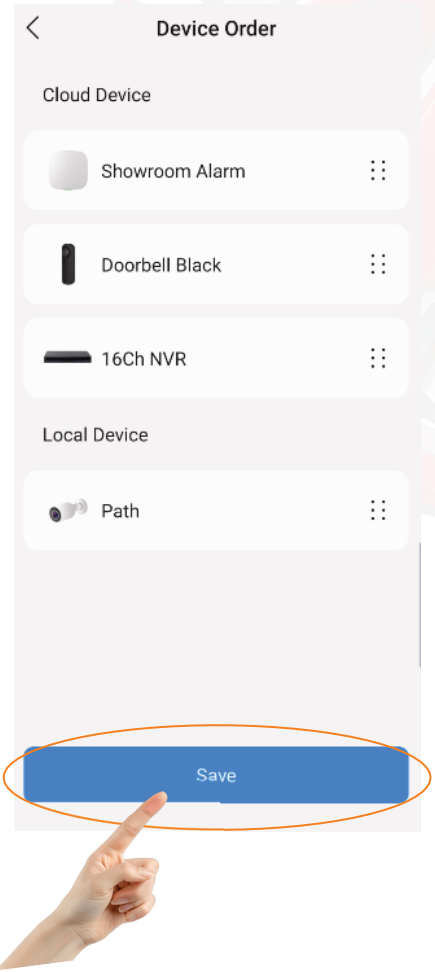

Once finished rearranging yur devices, click the blue save button.